



FUEL TANK SUZUKI DR650 20/25 L SERBATOIO SUZUKI DR650 20/25 L

COD. 500009044

ACERBIS PARTS

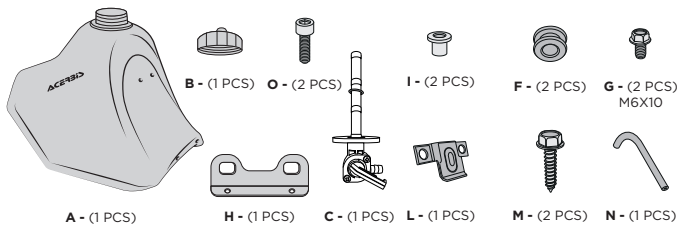

OEM PARTS




WARNING




Durante il rimontaggio suggeriamo vivamente di utilizzare un grasso anti-grippante sulle viti che entrano negli inserti in metallo.

Highly suggest to use anti-seize/grease lubricant on all bolt threads going into the tank's metal inserts when reinstalling.

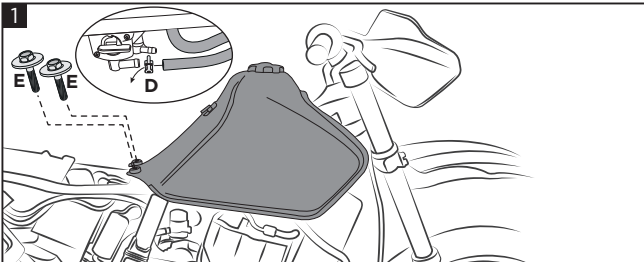


1 Completely empty the tank from the petrol. Remove the plastics and disassemble the original tank using the screw (E). Remove the original clamp (D) from the pipe.

Svuotare completamente il serbatoio dalla benzina. Rimuovere le plastiche e smontare il serbatoio originale tramite le viti (E). Rimuovere la fascetta originale (D) dal tubo.

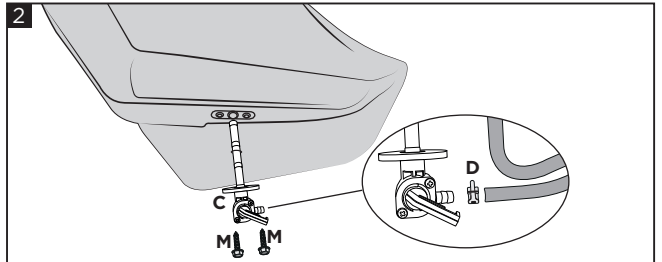


2 Assemble the petcock (C) (including O-Ring) using the appropriate screws (M). Fit the original clamp (D) on the pipe before connect it to the petcock.

Montare il rubinetto (C) (compreso di O-Ring) utilizzando le apposite viti (M) in dotazione. Montare la fascetta originale (D) sul tubo prima di collegarlo al rubinetto.

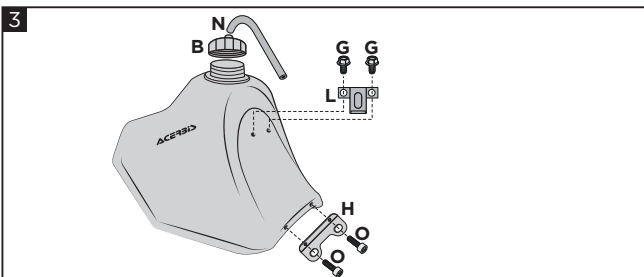

3 Insert the tube (N) in the cap (B). Fix the bracket (L) through the screws (G). Fix the bracket (H) using the screws (O) without tightening.

Inserire il tubo (N) nel tappo (B). Fissare la staffa (L) tramite le viti (G). Fissare la staffa (H) utilizzando le viti (O) senza stringere.

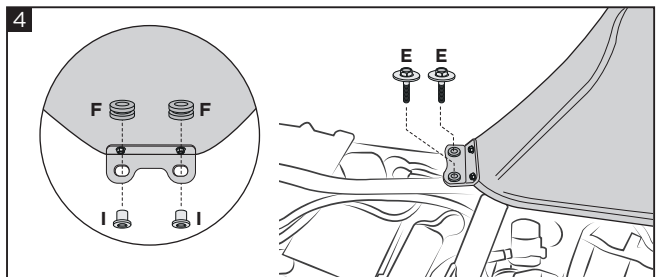

4 Insert the rubbers (F) and the bushings (I) in the bracket (H). Place the tank on the frame, making the bracket rest correctly. Tight the screws (O) and fix the tank through the original screws (E).

Inserire i gommini (F) e le boccole (I) nella staffa (H). Posizionare il serbatoio sul telaio facendo poggiare correttamente la staffa. Stringere le viti (O) e fissare il serbatoio tramite le viti originali (E).

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotational molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.

LIBERATORIA

A causa di variabili inponderabili nel processo di stampaggio rotazionale dei serbatoi, questi possono differire in forma e dimensioni fino al 7% rispetto alla capacità dichiarata.

FOR COMPETITION USE ONLY - SOLO PER USO MOTOCICLISTICO

WARNING!

It is EXTREMELY IMPORTANT that the fuel tank is properly installed. To ensure proper installation, it is STRONGLY RECOMMENDED that the tank is installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injuries or death.

If self-installed NOTE THE FOLLOWING: particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instructions first before beginning installation.

Acerbis recommends that installation must be done by a licensed mechanic and that only Acerbis' original parts are used during installation. Acerbis makes no guarantees or representations, express or implied, regarding the fitment of its product for any particular purpose. Acerbis makes no guarantees or representations, express or implied, regarding the extent to which its products protect individuals or property from injury or death or damage.

EUROPE

ACERBIS ITALIA S.P.A.
VIA SERIO, 37
24021 ALBINO (BG)
ITALY

U.S.A.

ACERBIS U.S.A. INC.
MAIL P.O. BOX 2030
SUN VALLEY, ID 83353
SHIP 110 LINDAY CIRCLE
KETCHUM, ID 83340
U.S.A.

UNITED KINGDOM

ACERBIS U.K LTD
UNIT 4 DUNFERMLINE COURT,
KINGSTON, MILTON KEYNES
MK10 0BY
GREAT BRITAIN